



Package Checklist

Verify that your High-Speed Internet Installation Package contains the following:



INSTALLATION CD



HIGH-SPEED MODEM



POWER ADAPTER



PHONE CORD



ETHERNET CABLE



MICRO-FILTER



USB CABLE

Important Notes

Disconnect any hubs or routers prior to running the Installation CD. Refer to the wiring diagram on reverse for detailed information. You can reconnect these devices after installation.

We highly recommend installing the Net Medic self-repair technician. This program will allow you to quickly and easily diagnose and repair a connection problem.

Net Guardian helps keep your computer safe from online threats. This free security suite provides virus protection, spam filter, pop-up protection, automatic security updates and more.

The modem has a built-in phone jack. No need to move or lose a phone to plug in the modem. A convenient phone jack is built right into the back.

Install the included Micro-Filters on your phone, fax or other devices. If you skip this step, you could experience noise and reduced phone service quality. Unused phone jacks do not need a filter.

Typical devices that require Micro-Filters include: Corded Telephones, Cordless Telephones, Caller ID Units, Answering Machines, Fax Machines, Dial-Up Modems, Satellite TV Dialers and Meter Readers.

For questions or technical assistance please call **866.221.1063** or visit **cavtel.com/help**

Complete listing of terms and conditions can be found at cavtel.com/terms


CAV-WIRED 10/09

HIGH-SPEED INTERNET INSTALLATION GUIDE


HIGH-SPEED INTERNET WIRING DIAGRAM

PLEASE USE THE SETUP BELOW BEFORE CONNECTING A ROUTER

STEP 1 Plug **Power Adapter** into modem and outlet.

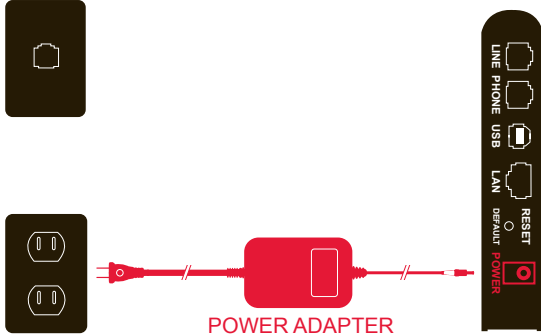


STEP 2 Plug **Phone Cord** into **LINE** on modem and into wall jack.

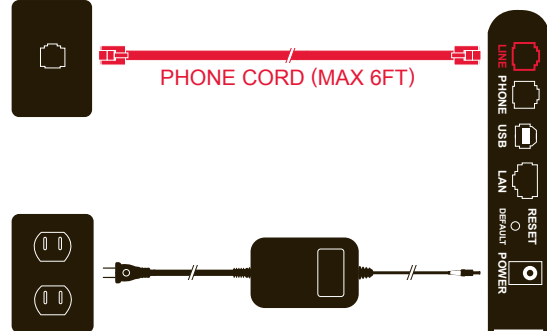

IMPORTANT: DO NOT CONNECT THE TELEPHONE MICRO-FILTER TO THE LINE GOING INTO YOUR MODEM. IT WILL BLOCK YOUR HIGH-SPEED CONNECTION.

STEP 3 Plug **Ethernet Cable** into **LAN** on modem and into computer.

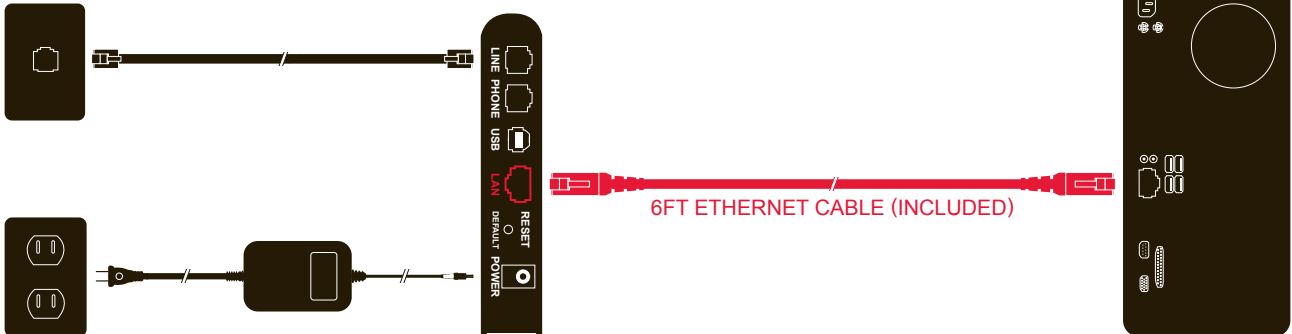

STEP 4 Plug **Micro-Filter** into wall jack. Then plug phone into **Micro-Filter**.



IMPORTANT

Single-outlet homes can connect their phone to the modem's built in phone jack. (No Micro-Filter necessary)



STEP 5 Insert **Installation CD** into computer.

After inserting the Installation CD into your computer, follow the instructions for installing Cavalier's High-Speed Internet. Please note, this CD does not automatically install any other programs or adjust any settings or browser information.

