




A PAETEC Company



Package Checklist Verify that your High-Speed Internet Installation Package contains the following:

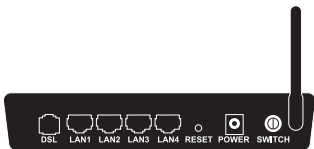

WIRELESS MODEM



PHONE CORD



ETHERNET CABLE



POWER ADAPTER



MICRO-FILTER

Important Notes

Use the wired configuration on the reverse to confirm service is working properly. Once you are online with this setup, you may then disconnect the ethernet cable and enable wireless to continue surfing.

We highly recommend installing the Net Medic self-repair technician. This program will allow you to quickly and easily diagnose and repair a connection problem.

Net Guardian helps keep your computer safe from online threats. This free security suite provides virus protection, spam filter, pop-up protection, automatic security updates and more.

Install the included Micro-Filters on your phone, fax or other devices. If you skip this step, you could experience noise and reduced phone service quality. Unused phone jacks do not need a filter.

Typical devices that require Micro-Filters include: Corded Telephones, Cordless Telephones, Caller ID Units, Answering Machines, Fax Machines, Dial-Up Modems, Satellite TV Receivers and Meter Readers.

For questions or technical assistance please call **866.221.1063** or visit **cavtel.com/help**

Complete listing of terms and conditions can be found at cavtel.com/terms


CAV-WIRELESS 08/11

WIRELESS INTERNET INSTALLATION GUIDE


HIGH-SPEED INTERNET WIRING DIAGRAM

PLEASE USE THE WIRED SETUP BELOW BEFORE ENABLING THE WIRELESS

STEP 1 Plug **Power Adapter** into modem and outlet.

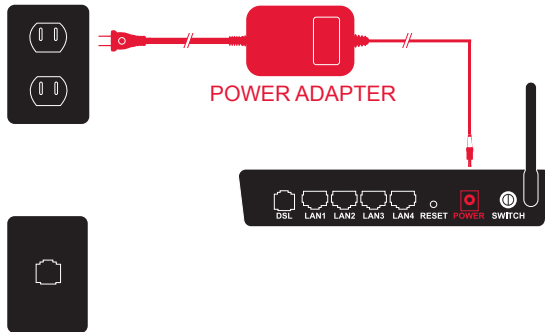


STEP 2 Plug **Phone Cord** into **ADSL** on modem and into wall jack.

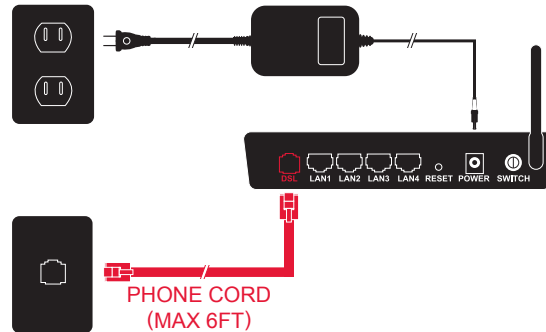


IMPORTANT: DO NOT CONNECT THE TELEPHONE MICRO-FILTER TO THE LINE GOING INTO YOUR MODEM. IT WILL BLOCK YOUR HIGH-SPEED CONNECTION.

STEP 3 Plug **Ethernet Cable** into **LAN1** on modem and into computer.

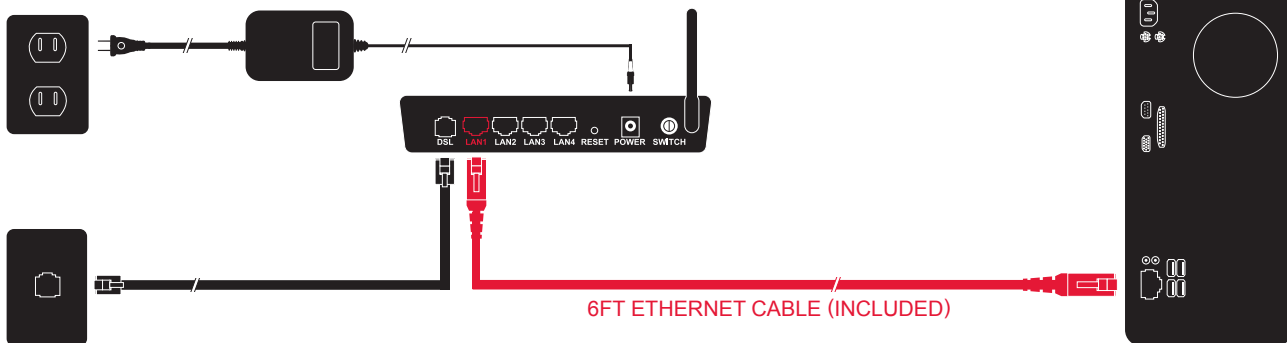

STEP 4 Plug **Micro-Filter** into wall jack. Then plug phone into **Micro-Filter**.

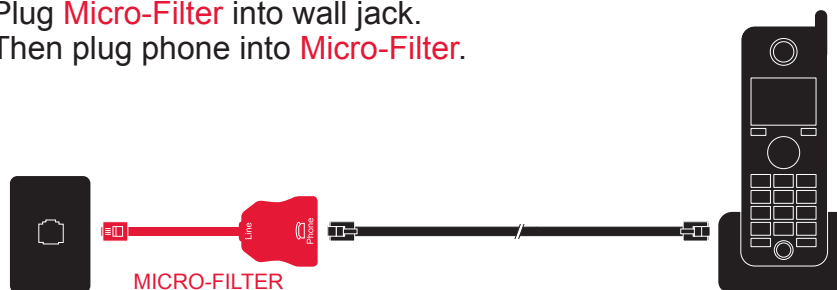

STEP 5 Go to **install.cavtel.net**

Follow the on-screen instructions to configure your wireless modem.

